

□ □ □ □ □ □ □ □ □ □

3M

Portable Labeler PL300



Quick Reference Guide

manufactured by:

DYMO

Wire Labels

Panel Labels

Terminal Block Labels

General Purpose labels

 
Vertical Wrap



1. Press



2. Select wire type: **COAX**, press



3. Enter text



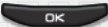

4. Press





Horizontal Wrap



1. Press  + 
2. Select label length: **AUTO**, press 
3. Enter text
4. Press 

Flag





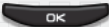

1. Press 
2. Select flag length: **AUTO**, press 
3. Press 
4. Select **VOICE/DATA**, press 
5. Press **L**, select **LAN**, press 
6. Press 









Self-Laminating



1. Press  + 
2. Select label length: **AUTO**, press 
3. Type text
4. Press 

Electrical Panel











1. Press 
2. Set number of blocks, block size, select **DONE**, press 
3. Type text
4. Press  to move to next breaker label
5. Enter text
6. Repeat steps 4 – 5 until all breakers are labeled
7. Press 



Patch Panel



1. Press 
2. Set port distance, number of ports, select **DONE**,
press 
3. Type text
4. Press 
5. Select **1** to be serialized, press 

6. Set increment, number of serializations,
press  , select **DONE**, press 
7. Press  select **ALL**

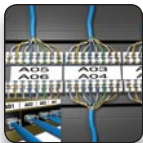
Back of Patch Panel (#1)


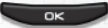



 

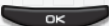

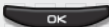





1. Create a Patch Panel.
(see Patch Panel steps 1 – 6 on page 7)
2. Press  + 
3. Set number of copies
7. Press









Back of Patch Panel (#2)



1. Press 
2. Set port distance, number of ports, select **DONE**,
press 
3. Enter text
4. Press  + 
5. Select **SIMULTANEOUS**, press 
6. Select **1** to be the first character to be serialized, 
press 
7. Select **2** to be the second character to be
serialized, press  
8. Set increment, number of serializations, press 
9. Press  + 
10. Set number of copies, press 

A/V Distribution Panel



 



1. Press 
2. Set port distance, number of ports, select **DONE**,
press 
3. Enter text
4. Press  +  one time to move to the next connector
5. Repeat steps 3–4 until first three ports are labeled
6. Press  + , select insert next label to the right,
press 
7. Repeat steps 3 – 6 until all ports are labeled
8. Press  select **ALL**






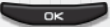
 
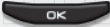

Module



1. Press 
2. Set fuse length, number of modules, multipliers: module 1, multiplier 1, select **DONE**, press 
3. Enter text
4. Press  one time to move to the next module
5. Repeat steps 3–4 until modules are labeled
6. Press 

Terminal Block


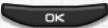


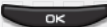

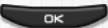
 
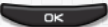




1. Press 
2. Set number of blocks, and block size, select **DONE**,
press 
3. Enter text
4. Press 
5. Select 1 to be serialized, press 

6. Set increment, number of serializations, press 
7. Press 




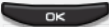

110 Terminal Block



1. Press 
2. Set port distance, number of ports, select **DONE**,
press 
3. Enter text
4. Press  + 
5. Select **SIMULTANEOUS**, press 
6. Select the first character to be serialized, 
press 
7. Select the second character to be to be serialized, 
press 
8. Set increment, number of serializations,
press 
9. Press 

Fixed Length



1. Press 
2. Set label length, press 
3. Enter text
4. Press 






Vertical



1. Press 
2. Set label length, press 
3. Enter text
4. Press 



Quick Tips

Label Settings

SETTINGS > Current Label
Configuration

CLR Key

Returns to general mode and clears
all text, formats, and font settings

Navigation

Arrows

Moves to next / previous label =
SHIFT + LEFT / RIGHT ARROWS

Numeral Selections

TOP / BOTTOM ARROWS
(Press and hold for faster speed)
Enter number

Printing

Multiple prints = SHIFT + PRINT
Feed the tape = SHIFT + CUT

Insert/Remove Labels

Insert labels = SHIFT + SAVE
Remove labels = SHIFT + RECALL

Save/Recall Labels

Save labels = SAVE
Recall labels = RECALL

Serialization

Simple (A1 A2 A3) = SERIAL
Simultaneous (A1 B2 C3) = SHIFT
+ SERIAL > Simultaneous
Advanced (A1 A2 B1 B2 C1 C2) =
SHIFT + SERIAL > Advanced

Technical Support:

800 245 3573



3M Electrical Markets Division
6801 River Place Blvd., Austin, TX 78726-9000
3M Canada, London, Ont. N6A 4T1
3M Mexico S.A. de C.V. Av. Sta Fe No. 55
Colonia Sta Fe C.P. 01210 Mexico D.F.

Made in China / Fabriqué en China / Hecho en China

Warranty: Limited Remedy; Limited Liability. This product will be free from defects in material and manufacture for a period of one year from the time of purchase. If this product is defective within the warranty period, your exclusive remedy shall be, at 3M's option, to replace the 3M product or refund the purchase price of the 3M product. Except where prohibited by law, 3M will not be liable for any indirect, special, incidental or consequential loss or damage arising from this 3M product, regardless of the legal theory asserted. 3M is a trademark of 3M Company.

78-8131-7936-9