

Recording ADR:

1. Mute the speakers on the Sound Web Monitor Controller:




2. Plug your mic into one of the first 8 inputs of the mic snake.




3. Open the ADR Template in the dock




4. When Prompted, Choose New Session.

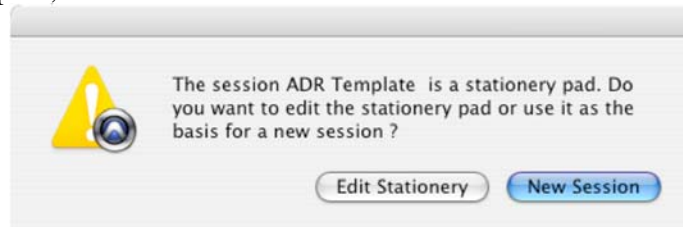

5. Save your new Session on the **ProTools Storage Drive**. You must save to this drive for your files to link properly.

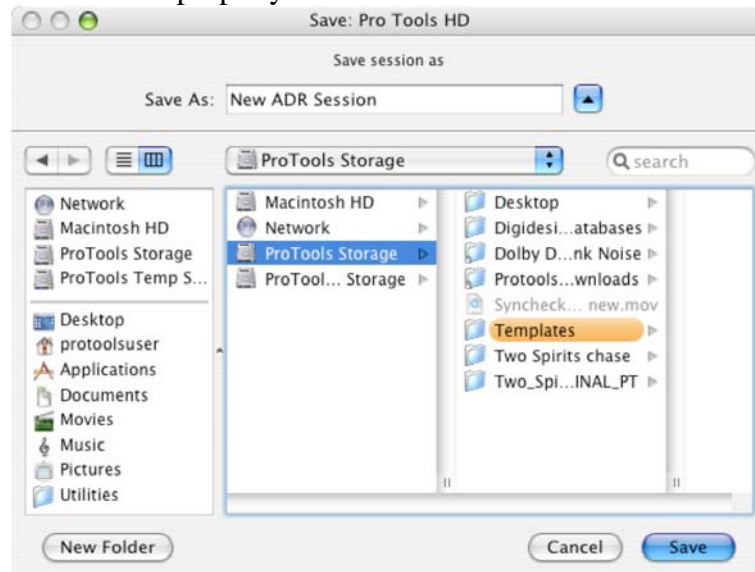

6. On the Track Labeled “ADR_001” Make sure that the input matches the mic input that you plugged your mic into.

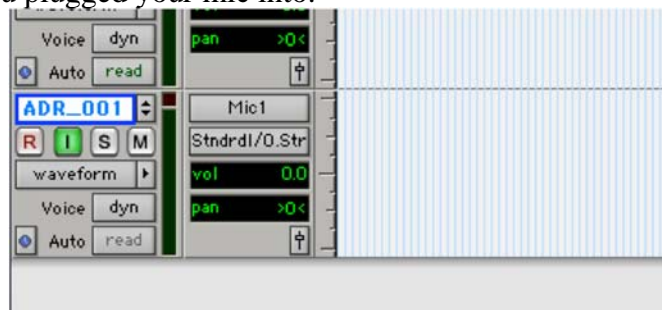

7. On the Console, press the **Source** button on the track corresponds to the input that you used on the mic snake and select **Mic**. A red LED will light when you are on the right input.



8. Adjust the Input Gain on the console so that you have good mic level on your protocols meter on the “ADR_001” Track.




9. Plug your headphones into the headphone amp at the top of the rack under the console and adjust the volume so that its comfortable.
10. To record your ADR, Record Arm the ADR_001 track. It should Flash Red.



11. Place the marker where you wish to record and click Record ready (it should flash red also.)



12. Click Play then play. A short cut for 11 and 12 is to press **APPLE+SpaceBar**.

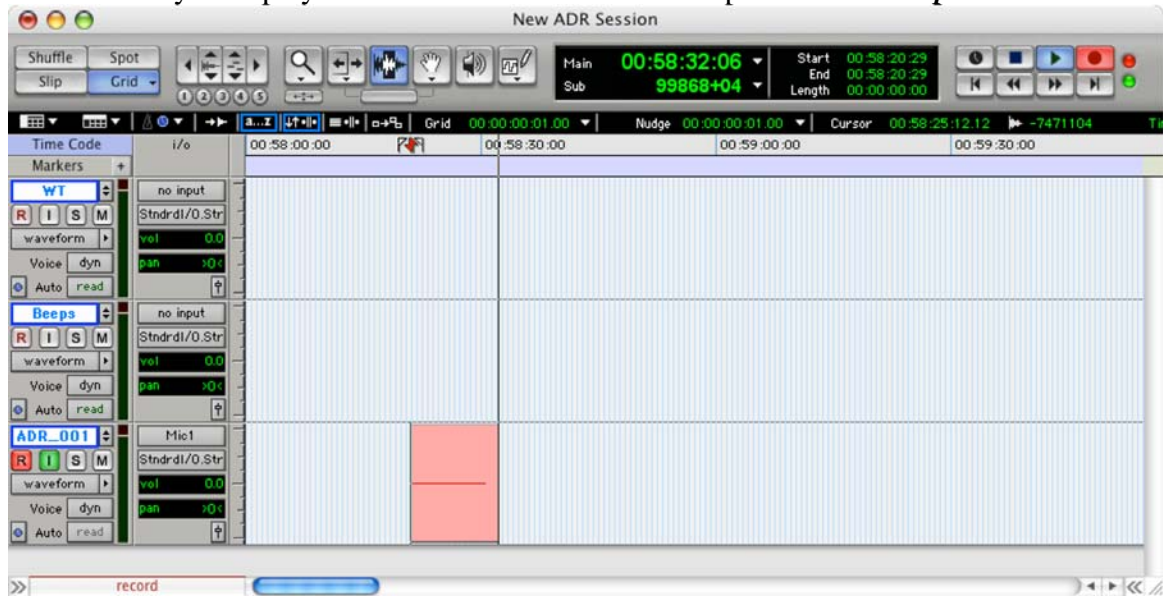

13. Make sure that you are using the video monitor for picture playback rather than the projector.

For information on importing and playing back video, see the “Importing Video” help files.